


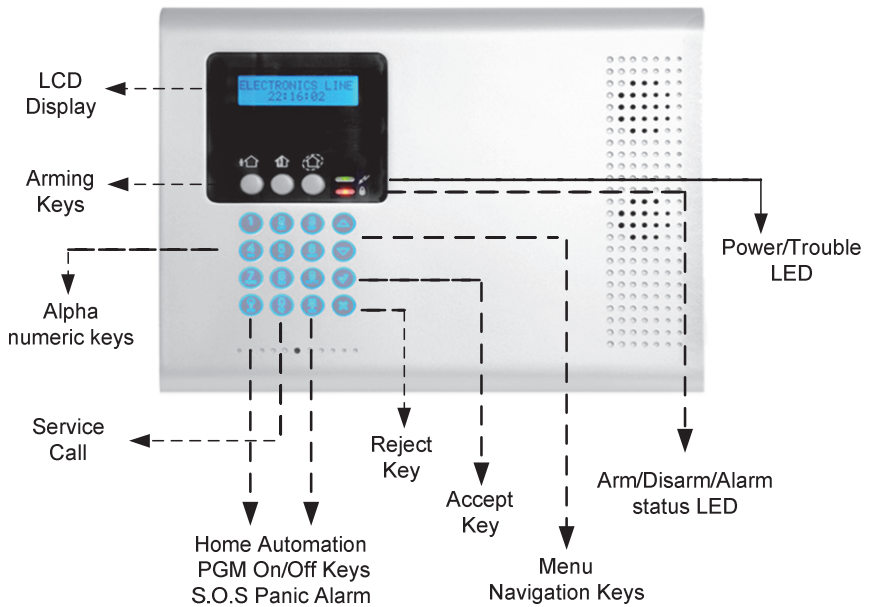


















# iconnect

## Quick User Guide



UPGRADING  
EVERYDAY  
SECURITY

Thank you for choosing **iConnect** wireless intruder control panel. This quick start guide describes the main user operating actions of the **iConnect**. To view the full version of the Installer manual, please refer our website [www.electronics-line.com](http://www.electronics-line.com)

<b>Full Arm</b>	Press 	
<b>Partial Arm</b>	Press 	If required, enter your user code
<b>Perimeter Arm</b>	Press 	
<b>Disarm</b>	Enter your user code	In addition, silences the siren in alarm event
<b>Partition 1/2 Arm</b>	Press 	
<b>Partition 1/2 Disarm</b>	Enter your user code > 	Available in a partitioned system
<b>Partition 1+2 Disarm</b>	Enter your user code > 	
<b>Panic alarm</b>	Press and hold down  + 	
<b>Fire alarm</b>	Press and hold down  + 	
<b>Medical alarm</b>	Press and hold down  + 	
<b>Check system troubles</b>	Press  and scroll the list	Additionally, silences an error tone
<b>Global Chime</b>	Press  	
<b>Access Menu Mode</b>	Press  then [User Code]	
<b>Service Call</b>	Press and hold 	
<b>Turn On / Off PGM</b>	 /  → 30	

## LEDs Indication





### LED:

**Off:** System disarmed  
**Green :** System armed  
**Flashing red :** Alarm

### 'OK' LED:

**Green:** Power OK  
**Yellow:** System trouble  
**Flashing green:** Open zone  
**Flashing yellow:** (Slow) Low battery, (Fast) AC loss

## Edit/Delete User Code

1. From the main display press .
2. Enter master code (Default code 1234)
3. Select [4] User Code and press .
4. Select a user and press .
5. Select [1] Edit Code.
6. Edit the user code or enter 0000 to delete
7. Press .

## Bypass / Unbypass a zone

1. Go to the main display and press .
2. Insert master code (default code '1234')
3. On the Main menu, press [21]
4. Select a zone and press  to toggle
5. To save the status, press .

## SMS Control Commands

Controlling the System through SMS

Command Code Numbers:

**120:** Disarm

**121:** Full arm

**122:** Part arm/Partition 1 arm

**200:** System arm status

**123:** Perimeter arm/Partition 2 arm

**128:** Disarm partition 1

**129:** Disarm partition 2

**0XX:** HA unit XX off

**1XX:** HA unit XX on

**030:** PGM off

**130:** PGM on

SMS Structure: [Free text - Up to 43 characters][#][User Code][Command]

Optional Free Text					User Code				Command				
D	I	S	A	R	M	#	1	2	3	4	1	2	0

Example: DISARM#1234120

## Telephone Control Commands

1. Dial the number of the premises

- ❖ If your system is connected to a regular phone line. Dial the number of the panel and wait for three rings then hang up. Wait at least five seconds and dial the number again. On the second ring the control system answers and sounds two tones.
- ❖ If your system support cellular communication dial and wait until the system answers and two tones are heard.






2. Within 15 seconds, enter the Telecontrol Code (code 29). After a tone sounds, press:

3: Full arm	4XX: HA Unit XX On
6: Disarm	5XX: HA Unit XX Off
7: Extend the call	430: PGM on
9: Cancel siren	530: PGM off
2: 2 Way Audio	*#: Disconnect the line









### Partitioned System

31: Full Arm	61: Full disarm
32: Arm Part. 1	62: Disarm Partition 1
33: Arm Part. 2	63: Disarm Partition 2

## Keyfob

-  : Full Arm
-  : Disarm
-  : Part Arm, HA/PGM
-  /  : Perimeter Arm, HA/PGM

## Partitioned System

-  : Arm P1
-  : Arm P2
-  →  : Disarm P1
-  →  : Disarm P2:
-  →  : Disarm P1+P2



## Connecting to your Web Browser Application

1. Enter the Web page address supplied by your WEB service provider and press **Go**.
2. Log In page:
  - a. **User name** and **Password** – Enter values supplied by your WEB service provider.
  - b. **Passcode** – Enter your iConnect user code
3. Click the Enter button