

infinite-WSM

Wireless Sounder Module

INSTALLATION GUIDE



Electronics Line

Introduction

The infinite-WSM is a wireless sounder module designed for use with the infinite wireless control panel (firmware versions 2.01 and above). This module enables the infinite system to interface with most popular external sounders. The unit will be most suitably located in the loft space, where a short hard-wired run to the external sounder can be most easily achieved.

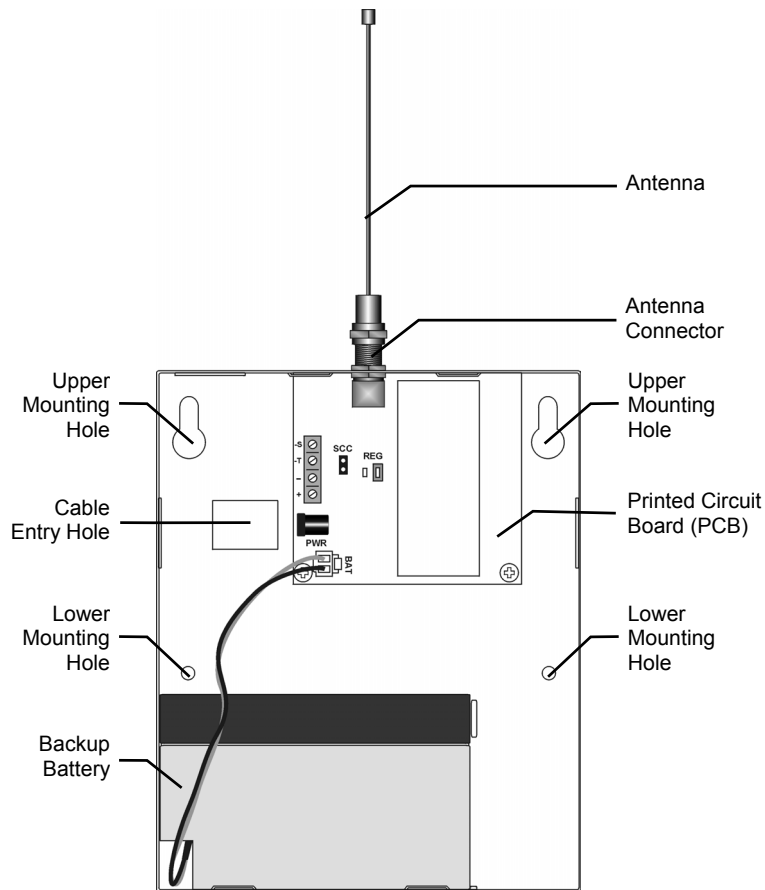


Figure 1: infinite-WSM (cover off)

Installation

1. Remove the cover screws and lift the front cover of the infinite-WSM away from the metal housing.
2. Connect the antenna to the antenna connector.
3. Connect the four-pin terminal block to the sounder as explained in the wiring reference table that appears in the following section.
4. Connect the backup battery to the battery connector on the PCB.

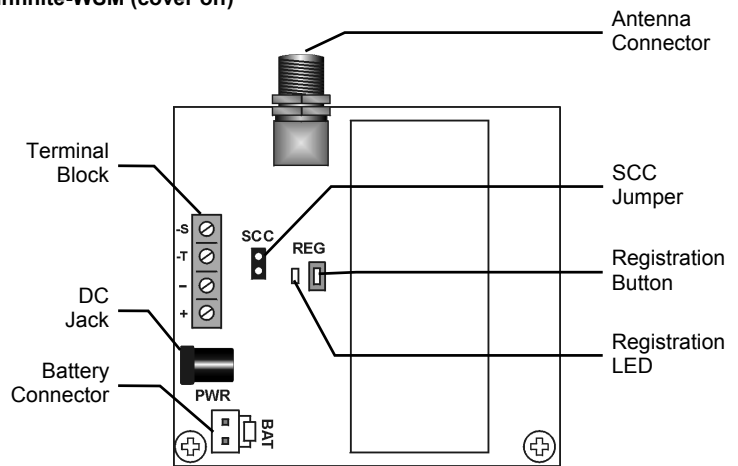


Figure 2: infinite-WSM PCB

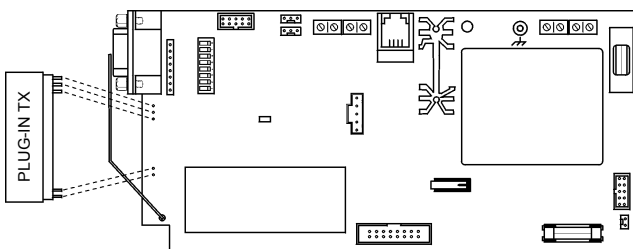


Figure 3: Plugging in the On-Board Transmitter

5. To support the infinite-WSM, the infinite's main board must have the plug-in transmitter installed. Plug the on-board transmitter into the infinite control panel's main board as shown in Figure 3.
6. On the control panel, define the siren type as "1-Way Siren" as follows:
 - From the Programming menu, select Devices, Siren, Ext. Siren Type [9152].
 - Select "1-Way Siren".
7. On the receiver, press the Registration button once to set the infinite-WSM to Registration mode; the Registration LED is lit.

8. On the control panel, perform the External Siren Test twice in order to register the control panel's transmitter to the infinite-WSM's receiver.

Note: During the registration procedure, make certain that no other wireless devices are transmitting so as not to interfere with the registration procedure. In the event that the wrong transmitter is registered to the receiver, you can delete the transmitter as explained below in "Deleting the Registered Transmitter".

To perform an External Siren Test:

- From the Service menu, select Ext. Siren Test [702].

When the first transmission is received, the Registration LED on the receiver switches off. After the second transmission is received, the LED flashes. When the LED stops flashing, the registration procedure is complete.

9. Before permanently mounting the infinite-WSM, test the reception from the exact mounting position. If necessary, relocate the receiver to a better position.
10. Via the wiring hole on the back cover, connect a 13.8VDC (350mA minimum) regulated AC/DC adapter to the DC jack on the infinite-WSM – *do not apply power yet!*
11. To mount the infinite-WSM, place the metal housing in position against the wall and mark the upper and lower mounting holes. Install wall anchors in the appropriate positions and mount the metal housing using four screws.
12. Replace the front cover and secure with the cover screws.
13. Apply mains power by connecting the adapter to an AC outlet.

Wiring the Unit

The infinite-WSM is able to interface with most popular sounders. To connect the infinite-WSM to a sounder, refer to the following wiring reference table and Figure 4 below.

infinite-WSM	-S	-T	-	+
Lyntek Vortex	STB-	TG-	HOLD -	HOLD+
Ventcroft Classic ^{NT}	STB-	TRG	HOLD OFF -	HOLD OFF +
C&K AG6	ST-	SW-	V-	V+
CQR Security Sigma	STRB	BELL	HOLD OFF -	HOLD OFF +
Texecom Odyssey	S (STRB)	B (BELL)	D (0V)	A (12V)
Texecom Azura 360	S (STRB)	B (BELL)	D (0V)	A (12V)
Texecom Tempest	S (STRB)	B (BELL)	D (0V)	A (12V)
Elmdene Sounda	-ST	-R	-H	+H
Micotech Flashguard	STROBE -	TRIGGER -	SUPPLY -	SUPPLY +
Pyronix Belle	STB	BA	B-	B+

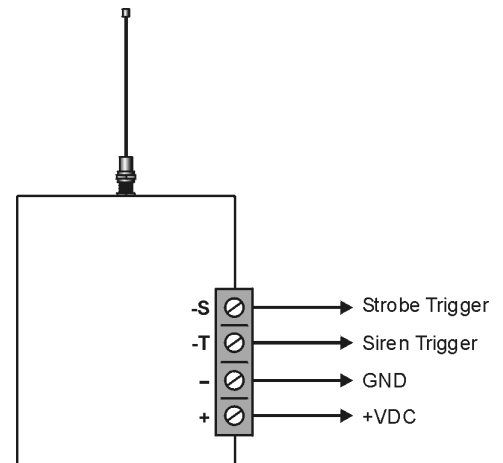


Figure 4: Wiring Connections

Strobe Current Conservation

Strobe Current Conservation is a feature that is designed to conserve the backup battery. If this feature is enabled, the strobe operates in "siren follower" mode when mains power is disconnected. This means that the strobe will only function when the siren trigger is on.

- To enable the Strobe Current Conservation feature, install the SCC jumper – see Figure 2.
- To disable the Strobe Current Conservation feature, remove the SCC jumper and place over one pin for storage.

Deleting the Registered Transmitter

In certain cases, it may be necessary to delete the registered transmitter in order to allow the registration of a new transmitter. To delete a registered transmitter:

1. Press and hold down the Registration button; the Registration LED is lit.
2. Continue to hold down the Registration button until the Registration LED turns off; the registered transmitter is deleted.

Technical Specifications

Operating Voltage: 13.8VDC (regulated)

Backup Battery: 12V/0.8Ah

Receiver Frequency: 868.35, 433.92 or 418MHz FM

Current Consumption: 25mA

Dimensions: 163 x 133 x 41mm



Electronics Line

Web: www.electronics-line.com

International Headquarters:

Electronics Line 3000 Ltd.

2 Granit St.
Kiryat Arie Industrial Zone
POB 3253
Petah Tikva 49130 Israel
Tel: (+972-3) 918-1333
Fax: (+972-3) 922-0831

Electronics Line USA

5637 Arapahoe Avenue
Boulder, CO 80303
Tel: (800) 683-6835
Fax: (303) 938-8062

ESP - Electronics Line UK

Unit 7, Leviss Trading Estate
Station Road, Stechford
Birmingham B33 9AE
Tel: (+44-121) 789-8111
Fax: (+44-121) 789-8055

Sectec - Electronics Line France

Zi 61 Rue du Marche Rollay
94500 Champigny Sur Marne
Tel: (+33-1) 45.16.19.20
Fax: (+33-1) 45.16.19.29



All data is subject to change without prior notice. In no event shall Electronics Line 3000 Ltd. (EL3K) be liable for an amount in excess of EL3K's original selling price of this product, for any loss or damage whether direct, indirect, incidental, consequential or otherwise arising out of any failure of the product.
Hereby, Electronics Line 3000 Ltd. declares that this module is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.