

# EL-2635

## Repeater

### INSTALLATION GUIDE



Electronics Line

## Introduction

The EL-2635 is a wireless repeater designed to extend the range of wireless devices registered to the infinite control panel. Up to four repeaters can be registered to the control panel with 32 transmitters registered to each repeater. The repeater is powered by either 9VAC or 12VDC with a 6V rechargeable backup battery pack. Registration and maintenance tests are performed using a plug-in LCD programming keypad that provides a comprehensive interface to the repeater.

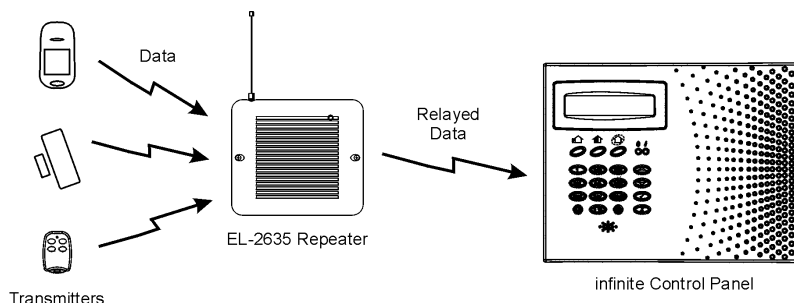


Figure 1: Typical Single Repeater Application

## Installation

1. Register all wireless devices to the infinite control panel as explained in the infinite installation manual.
2. On the control panel, define the detection devices that are intended to transmit via the repeater as follows:
  - From the Programming menu, select Devices, Zones [911].
  - Select the zone you want to program (1-32).
  - From the zone's sub-menu, select Repeater [#9].
  - Select "Use Repeater".

**Note: It is not necessary to define, at the control panel, the keypads and keyfobs that are registered to the repeater.**

3. Open the EL-2635's plastic housing. To do so, remove the two cover screws and lift the front cover away from the base.

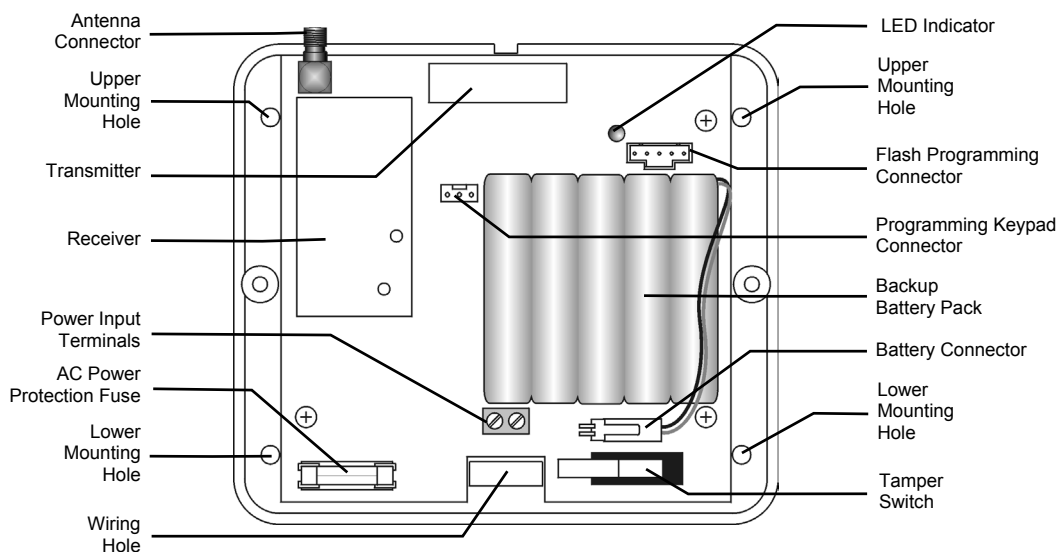


Figure 2: EL-2635 (cover removed)

4. Connect the antenna provided to the antenna connector.
5. Connect the backup battery pack to the Battery connector.
6. Connect a 9VAC or 12VDC transformer to the Power Input terminal block (polarity is not important).
7. All registration and test functions, described in the following sections, are performed from the LCD programming keypad shown in Figure 3. Connect the programming keypad to the Programming Keypad connector.

**Note: The programming keypad is not able to operate on battery power only.**

8. Test the repeater from the required mounting location before permanently mounting the unit.
9. Mount the base to the wall using four screws and replace the front cover.

When the tamper switch is open, the bi-color LED provides indication regarding repeater transmission and reception as an aid during the installation procedure – see Table 1. When the tamper switch is closed, the bi-color LED provides indication regarding power status – see Table 2.

LED Indication	Description
Flashing Green	Signal Reception
Flashing Red	Signal Transmission

Table 1: LED Indication (Tamper Open)

LED Indication	Description
Steady Green	AC & Battery OK
Flashing Red	AC Loss
Flashing Orange	Low Battery

Table 2: LED Indication (Tamper Closed)

## Registering the Repeater to the Control Panel

For the control panel to recognize the repeater, you must register the repeater to the control panel.

To register the repeater to the control panel:

1. Set the **control panel** to Registration mode as follows:
  - From the Programming menu, select Devices, Repeaters [914].
  - Select the repeater you want to register (1-4).
  - From the repeater's sub-menu, select Register [#1].
2. Send two Status transmissions from the **repeater** as follows:
  - On the programming keypad, press ▼ until **5. STS Transmit** appears on the display.
  - Press ✓.
  - Press ✓ again.
3. Confirm registration to the **control panel** as follows:
  - When **Save?** appears on the control panel's LCD display, press ✓.

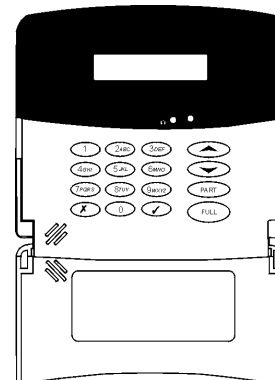


Figure 3: LCD Programming Keypad

## Registering Transmitters to the Repeater

You can register up to 32 transmitters to the EL-2635 repeater.

**Note: Do not register the same transmitter to more than one repeater.**

To register transmitters to the repeater:

1. On the LCD programming keypad, press  $\blacktriangledown$  until **4. TX Register** appears on the display.
2. Press  $\checkmark$ ; **New Device** appears on the display.
3. Press  $\checkmark$  again; **Transmit 1** appears on the display.
4. Send two transmissions from the device you want to register.
5. When the transmitter number and **Save?** appear on the display, press  $\checkmark$  to confirm registration.

**Note: The EL-2635 repeater automatically allocates a transmitter number to each newly registered device. Write this number and the zone number on the sticker provided with the sensor and stick it inside the transmitter's cover for future reference.**

6. After you have confirmed registration, the display returns to **New Device**. Press  $\checkmark$  to register another device or  $\times$  to exit Registration mode.

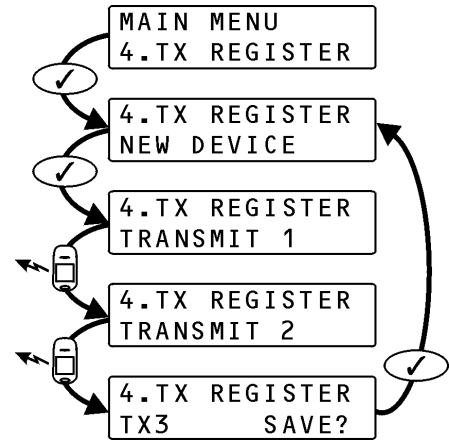


Figure 4: Transmitter Registration Procedure

## Deleting Registered Transmitters

To delete transmitters from the repeater's register:

1. On the LCD programming keypad, press  $\blacktriangledown$  until **3. TX Delete** appears on the display.
2. Press  $\checkmark$ ; the first transmitter in the list appears on the display.
3. Use the arrow navigation keys ( $\blacktriangle/\blacktriangledown$ ) to scroll to the transmitter you want to delete.
4. Press  $\checkmark$  to select the transmitter.
5. Press  $\checkmark$  again for confirmation; the transmitter is deleted.
6. Select another transmitter to delete or press  $\times$  to exit.

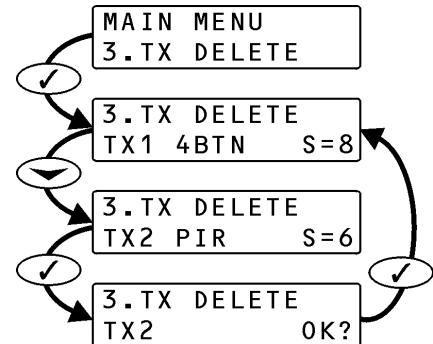


Figure 5: Delete Transmitter Procedure

## Installer Utilities

The EL-2635 repeater offers two installer utilities that serve as a valuable aid during installation and maintenance.

### TX List

The TX List is a scrollable inventory of all registered transmitters and their last reported signal strength.

To view the TX list:

1. Press  $\blacktriangledown$  until **1. TX List** appears on the display.
2. Press  $\checkmark$ ; the first transmitter in the list is displayed.
3. Use the arrow navigation keys ( $\blacktriangle/\blacktriangledown$ ) to scroll through the list.
4. Press  $\times$  to exit the list.

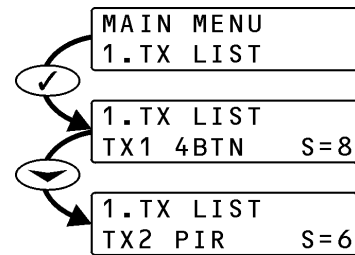


Figure 6: TX List Procedure

### TX Test

TX Test is a utility that enables you to identify registered transmitters and test their signal strength.

To perform a TX test:

1. Press  $\blacktriangledown$  until **2. TX Test** appears on the display.
2. Press  $\checkmark$ .
3. Activate a transmitter; the transmitter number, type and signal strength are displayed.
4. Press  $\times$  to exit TX Test mode.

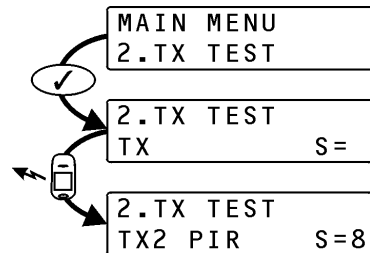


Figure 7: TX Test Procedure

## Technical Specifications

Frequency: 868.35MHz, 433.92MHz or 418MHz FM

Antenna: External Whip

Operating Voltage: 9VAC or 12VDC

Backup Battery: 6V/850mAh

(5 x 1.2V Ni-MH rechargeable cells, size AAAL)

Current Consumption: 100mA max. (during transmission)

Number of Transmitters: 32 max.

Tamper Protection: Front Cover (N.C.)

Operating Temperature: 0-60°C

Dimensions: 123 x 109 x 27mm



Electronics Line

Web: [www.electronics-line.com](http://www.electronics-line.com)

**International Headquarters:**

***Electronics Line 3000 Ltd.***

2 Granit St.  
Kiryat Arie Industrial Zone  
POB 3253  
Petah Tikva 49130 Israel  
Tel: (+972-3) 918-1333  
Fax: (+972-3) 922-0831

***Electronics Line USA***

5637 Arapahoe Avenue  
Boulder, CO 80303  
Tel: (800) 683-6835  
Fax: (303) 938-8062

***ESP - Electronics Line UK***

Unit 7, Leviss Trading Estate  
Station Road, Stechford  
Birmingham B33 9AE  
Tel: (+44-121) 789-8111  
Fax: (+44-121) 789-8055

***Sectec - Electronics Line France***

Zi 61 Rue du Marche Rollay  
94500 Champigny Sur Marne  
Tel: (+33-1) 45.16.19.20  
Fax: (+33-1) 45.16.19.29



All data is subject to change without prior notice. In no event shall Electronics Line 3000 Ltd. (EL3K) be liable for an amount in excess of EL3K's original selling price of this product, for any loss or damage whether direct, indirect, incidental, consequential or otherwise arising out of any failure of the product.  
Hereby, Electronics Line 3000 Ltd. declares that this repeater is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.